
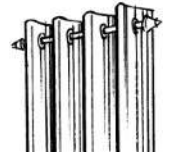
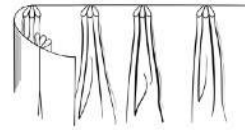



Working Measurements for Draperies

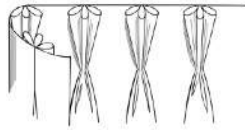

STEP 1: MEASURE YOUR WINDOW


Collect the following information:

- 1. Quantity:** the number of windows of the same size.
- 2. Window Width:** the horizontal size of the window including trim (molding).
- 3. and 4. Left and right restrictions:** the horizontal space from outside the window trim to the nearest adjoining window, wall, cabinet or other obstruction.
- 5. Top of Window to Floor:** the vertical distance from top of window trim to touching the oor.
- 6. Top of Window to Ceiling:** the vertical space between the top of the window trim and the ceiling or crown molding.

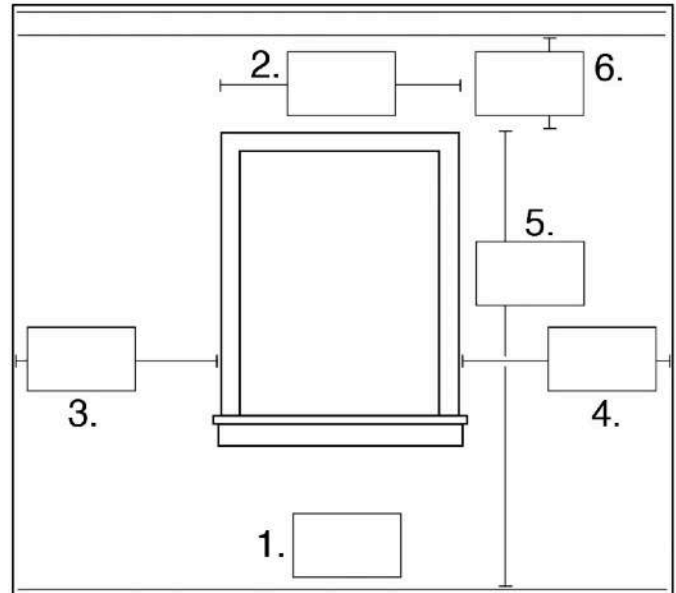

STEP 2: DETERMINE FINISHED MEASUREMENTS

- Indicate the **Quantity** of window treatments of the same size, style and fabrics.
- Determine the drapery's **Face Width**. Add several inches (up to 8" for single windows, 12" or more for larger windows) to **each side** of the window width, as space allows. This allows a functional drapery to clear the window's glass when open. The same principle applies to stationary side panels.
- Determine the drapery's **Finished Length**. Measure from several inches (usually 4" to 6") above top of window trim, as space allows, to touching oor. Subtract 1/2" for draperies to clear floor.

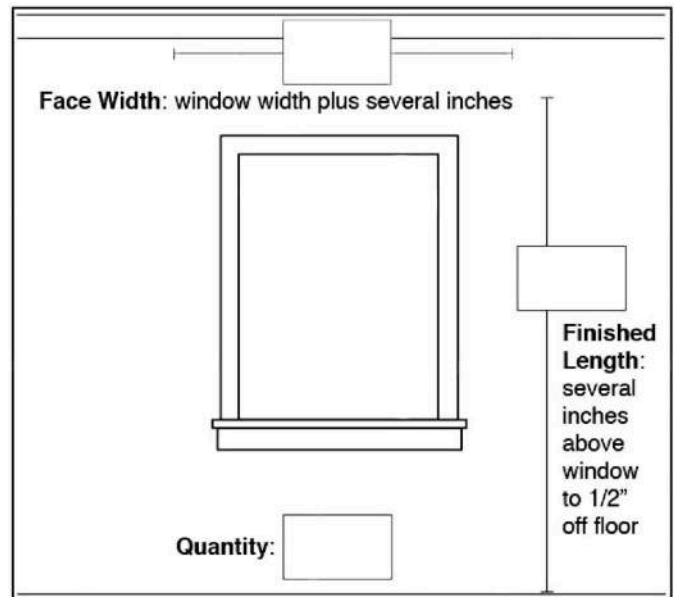

To enhance apparent window size and reveal maximum light and view, place window treatments outside and above windows.